Enabling Limitag Windows Driver on remote PC

Involved material

- V5 (lite) with preinstalled driver
 - o IP address (sample): 192.168.1.99
 - o LAN Printer name: IMP
- Remote PC using Windows XP
- Limitag_Custom_Install.ZIP file

Testing communication

- 1. Refer to documentation on how to connect the V5 controllers to a remote PC using Ethernet.
- 2. Once connected, you should be able to access following remote folders.
- 3. Given the above configuration, you should be able to access:
 - o <u>\\IMP\SpoolV5\ph1</u> ■ Or
 - o <u>\\192.168.1.99\SpoolV5\ph1</u>

Adding the Limitag Windows driver on Remote PC

- 1. Uncompress the Limitag_Custom_Install.ZIP file in any temporary folder
- 2. Run zvprt5_setup.exe.

Setup	
2	This will install Limitag V5, do you wish to continue?
	<u>Sí</u> <u>N</u> o

- 3. Answer <Yes>
- 4. Then you get the following screen:

	e
Setup - Limitag V5	Ľ
_ Installation Directory	
C:\Archivos de programa\zvprt50	Browse
Please select the printers to install (double click on a printer to edit the	settings)
🗹 Limitag Cab 1	<u>N</u> ew
✓ Limitag Cab 2	
✓ Limitag Cab 3 ✓ Limitag Cab 4	Cottingo
	<u>s</u> ettings
	<u>D</u> elete
	-
Log File	
	Bro <u>w</u> se
<u>O</u> K <u>C</u> ancel	<u>H</u> elp

5. If you have a Limitag V5 Lite, leave only Limitag Cab 1 checked. Press < Ok>

Limitronic

ENABLING LIMITAG WINDOWS DRIVER ON REMOTE PC



- 6. Now you have just added new printers to your Windows Printer List.
- 7. Check your *Printers & Faxes* window of your Operating System:



On V5 Lite printer only Limitag Cab 1 should appear

Configuring the Limitag Windows driver

It is a must to configure the printer before using it.

- Access the printer properties of above *Limitag Cab1* printer doing:

 Double click on *Limitag Cab1* printer
 - b. Menu: Printer -> Properties
 - or
 - a. Right click on Limitag Cab 1 printer
 - b. Select Properties

Administración d	el color	Seguridad	Configuración de dispositivo
General	Compartir	Puertos	Opciones avanzadas
Limita	ag Cab 1		
bicación:			
omentario:			
odelo: zvprt1			
Características —			
Color: Sí		Papel disponibl	le:
Doble cara: No		A4	~
Grapa: No			
Velocidad: 7 ppm			
Resolución máxima:	180 ppp		~
	P	referencias de impresió	ón Imprimir página de pr <u>u</u> eba

2. Press <Preferencias de impresión> or <Print preferentes> button

Limitronic ENABLING LIMITAG WINDOWS DRIVER ON REMOTE PC

🌢 Preferencias de impresión	ı de Limitag Cab 1 🛛 ? 🗙
 Preferencias de impresión Presentación Papel/Calidad Sa Orientación Mertical Horizontal Orden de las páginas Agcendente Descendente Páginas por hoja: 1 	re Image Settings About
	Opciones <u>a</u> vanzadas Aceptar Cancelar Apli <u>c</u> ar

3. Select Save Tab

💩 Preferencias de	impresión de Limitag Cab 1				
Presentación Papel/	Calidad Save Image Settings About				
Cutput File Description					
<u>F</u> older:	c:\Spool/5\ph1\				
File <u>N</u> ame:	recprint Macro V				
Init File Number:	1				
Example:	recprint.bmp				
When File <u>E</u> xists:	Always overwrite				
Before Printing Sta	ts Show the:				
○ <u>S</u> ave As Dialog	○ Image Printer Dialog ③ No Dialogs				
Using the Page Number or File Number macro is suggested if the document being printed contains more than 1 page.					
	Aceptar Cancelar Apligar				

- 4. Pay attention to *Folder* field. You should change the *Folder* field by editing the text with the following rule:
 - a. Edit and change the 'C:' text by the network path to your printer. In our sample case, new text is: <u>\\192.168.1.99\SpoolV5\ph1</u> or <u>\\IMP\SpoolV5\ph1</u>

Limitronic

🌢 Preferencias de	e impresión de Limitag Cab 1	×			
Presentación Papel	/Calidad Save Image Settings About				
Cutput File Description					
<u>F</u> older:	\\IMP\Spool/5\ph1				
File <u>N</u> ame:	recprint Macro 💌				
Init File Number:	1				
Example:	recprint.bmp				
When File <u>E</u> xists:	Always overwrite				
Before Printing Starts Show the:					
○ <u>S</u> ave As Dialog	g O Image Printer <u>D</u> ialog				
Using the Page Number or File Number macro is suggested if the document being printed contains more than 1 page.					
	Aceptar Cancelar Aplicar				

Testing the Limitag Windows driver

Now it is a good time to test if driver has been installed properly. Access *general* Tab on the *Limitag Cab1* printer properties and press the *print test page* button

You should see the Test Page Windows page on your printer ready to be printed.